




# Detergent dosage instructions

## 1 Choose wash cycle by turning

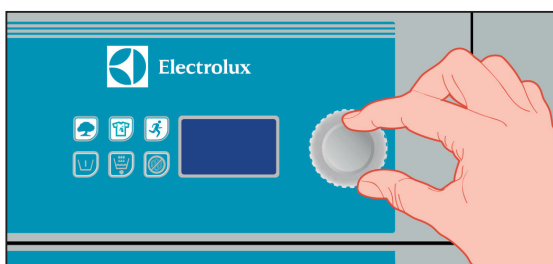

### Choose wash cycle



**Color wash**  
Use detergent without bleach.  
Normal procedure - long centrifugation (short dry time).



**White wash**  
Use detergent with bleach.  
Normal procedure - long centrifugation (short dry time).



**Handwash/wool wash**  
Use detergent for handwash and wool wash.  
Gentle procedure, short centrifugation. Using these cycles, only fill drum by half capacity.



**Rins drum**  
Rinses the drum and soap dispenser.

**Rinse cycle**  
One rinse cycle followed by a short centrifugation.

## 2 Choose additional options



### Dosage is automatically adjusted to option chosen.

**Additional options** (Additional options are used in combination with wash cycles. NB! Certain wash cycles do not allow additional)



**Economy**  
Wash with less water and energi. Environmentally friendly options for regularly dirty clothes.



**Very dirty**  
Long wash cycles for very dirty clothes.



**Quick wash**  
Wash cycles ends as quickly as possible. Short wash cycle for slightly dirty clothes.



**Prewash**  
Prewash is added.




**Extra rinse**  
An extra rinse cycle is added.



**Press once**  
Deselect fabric softener  
**Press twice**  
Deselect automatic dosage of detergent and fabric softener.

## 3 Start by pressing the button

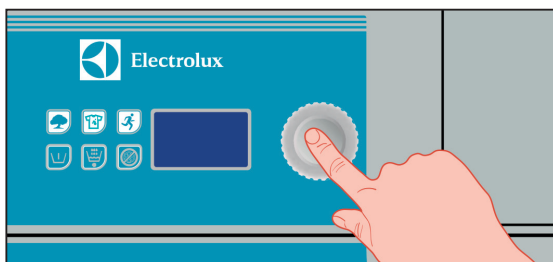

### Waighing of clothes begins...

Upon pressing the start button the washing begins weighing the clothes by means of centrifugation. The washing cycle is automatic adjusted to the quantity of clothes.

The washing machine doses the optimal amount of detergent and water to achieve an optimal washing result.

### When the washing cycle is done

When you finish washing, leave the door open.