

# Washing instructions

## Automatic dosing of soap and fabric softener

**1** Touch the screen and scroll.  
Press to select a program



### Select wash program



**Colored wash**  
Use soap without bleach.  
Regular processing - long spin cycle  
(shorter drying time).



**White wash**  
Use detergent with bleach.  
Regular processing - long spin cycle  
(shorter drying time).



**Hand wash/wool 30°**  
For both hand and wool washing, use  
special soap for wool. Gentle processing,  
short spin cycle. When using these programs,  
the machine should only be filled halfway.



**Drum rinse**  
Cleans the drum and  
rinses the soap drawer.

**Rinse program**  
A rinse followed by a short spin cycle.


**2** Choose an option by  
pressing the symbols



The washing machine is connected to automatic dosing of soap and fabric softener. Therefore, they should not be added separately

### Washing without fabric softener is the default setting

If you want to add rinse aid, press the rinse aid symbol and confirm by pressing the green symbol.

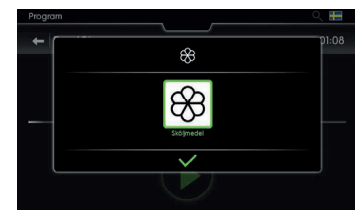

**3** Start the program by pressing  
the start/green symbol



### Weighing of laundry starts...

After starting, the machine weighs the laundry using centrifugation. The washing process (water, electricity, and time consumption) is then automatically adjusted based on the amount of clothes in the machine.

### If you want to pause the program

Press the pause symbol

The door can be opened after a short moment, provided that the water level is not too high. Close the door and press the green symbol to resume the washing program.

### When "time for service" appears on the display

Inform the person in charge of the laundry. However, the machine can still be used.

### When the laundry is finished

Leave the washing machine door open.