 
 


Detergent dosage instructions

1 Choose wash cycle by turning

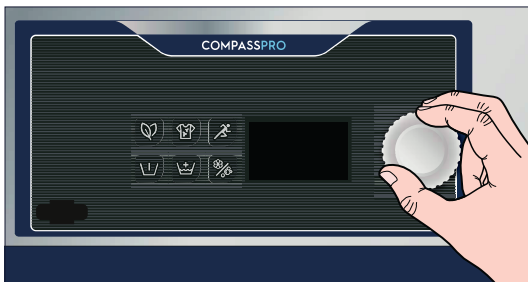

Choose wash cycle

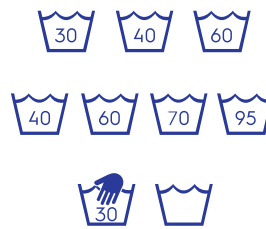

- Colored wash**
Soap without bleach is used. Normal processing - long spin cycle (shorter drying time).
- White wash**
Soap with bleach is used. Normal processing - long spin cycle (shorter drying time).
- Mild/Hand wash/Wool 30°**
Hand and wool wash, special soap for wool is used. Gentle processing, short centrifugation. When using these programmes, the machine should only be half full.

Rinse the drum
Rinses the drum and rinses the detergent container

Rinse program A flush followed by a short centrifugation

2 Choose additional options




Dosage of soap and fabric softener

The washing machine is connected to automatic dosing of soap and fabric softener. This must therefore **not be added**.

Extra functions

- Eco**
To normal dirty clothes, environmentally friendly washing
- Very dirty**
To very dirty textiles, long washing time
- Quick wash**
For lightly soiled clothes, short washing time
- Pre-wash**
A pre-wash is added
- Extra flush**
A rinse is added
- Press once**
No fabric softener
Press twice
No automatic addition of detergent or rinse aid

3 Start by pressing the button

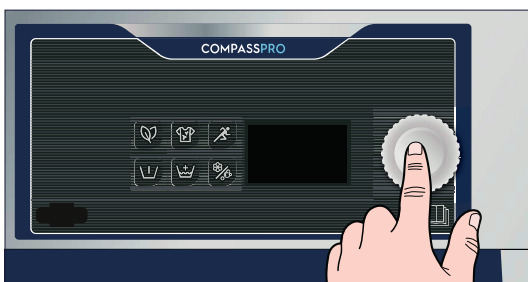

Weighing off the filling starts

Once started, the machine analyzes the laundry load using the spin function. The washing process is then automatically adjusted to the weight of the filling.

When the word "vedligeholdelse" is displayed

Inform the person in charge of maintenance. The machine can still be used.

If there is a need for a break in the program

Press the button. A menu with the word pause highlighted appears on the display. Press again to pause the washing program. The door can be opened after a short time, unless the water level is too high. Close the door and press the button to continue the washing program.

When the wash is done

Leave the door open. Clean the detergent compartment, leave the lid of the detergent container open.