


# Detergent dosage instructions

## 1 Choose wash cycle by turning

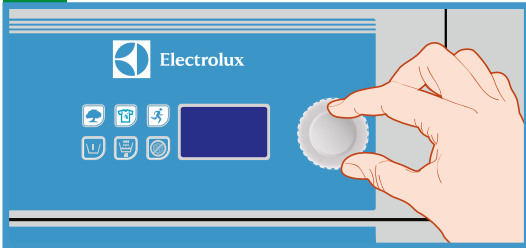

### Choose wash cycle



#### Color



Color wash  
Use detergent without bleach.  
Normal procedure - Long centrifugation (short dry time)



#### White



White wash  
Use detergent with bleach.  
Normal procedure - Long centrifugation (short dry time)



#### Hand-wash 30° / Wool



Hand wash / Wool wash  
Use detergent for handwash and wool wash.  
Gentle procedure, short centrifugation.  
Using these cycles, only fill drum by half capacity.



#### Rins drum


Rinses the drum and soap dispenser



#### Rinse cycle

One rinse cycle followed by a short centrifugation

## 2 Choose additional options

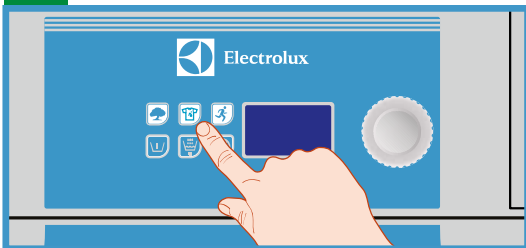

### Dosage is automatically adjusted to option chosen.

#### Additional options

(Additional options are used in combination with wash cycles.  
NB! Certain wash cycles do not allow additional)



#### Economy

Wash with less water and energy. Environmentally friendly options for regularly dirty clothes



#### Very dirty

Long wash cycle for very dirty clothes



#### Quick Wash

Wash cycle ends as quickly as possible. Short wash cycle for Slightly dirty clothes.



#### Prewash

Prewash is added



#### Extra rinse

An extra rinse cycle is added




#### Press once

Deselect fabric softener

#### Press twice

Deselect automatic dosage of detergent and fabric softener

## 3 Start by pressing the button

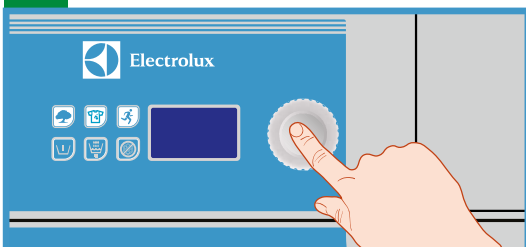

### Waighing of clothes begins...

Upon pressing the start button the washing begins weighing the clothes by means of centrifugation. The washing cycle is automatic adjusted to the quantity of clothes.

The washing machine doses the optimal amount of detergent an water to achieve an optimal washing result.

### When the washing cycle is done

When you finish washing, leave the door open.

