




Washing instructions - choice of detergent

1. Fill the washing machine - when the machine is full, there should be a hand's width of air for the drum.
2. Remember to select a program. The keyboard is locked when the machine is started.

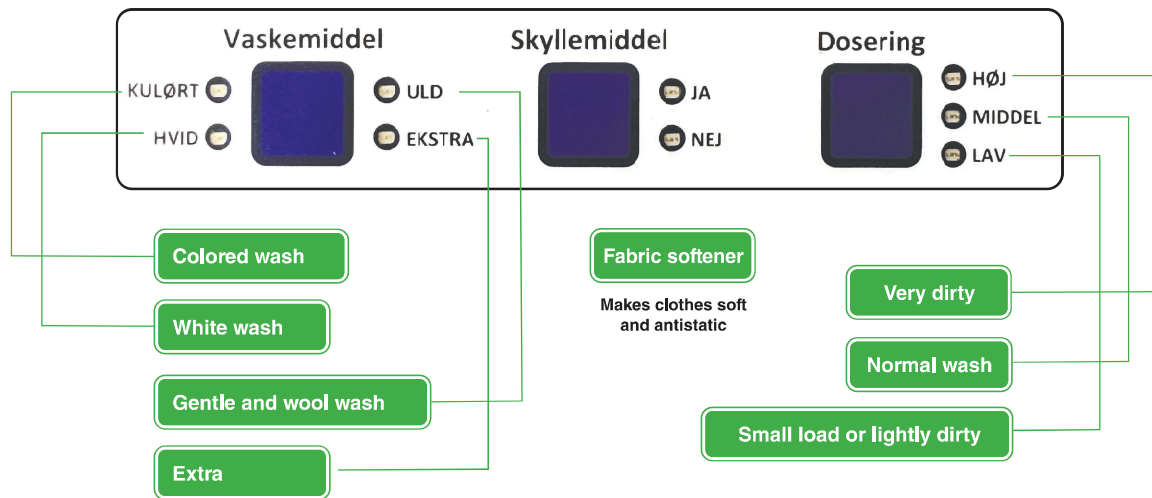

No light = No soap
Detergent and rinse aid are selected when the red light is on.
When the washing machine is started, the selected settings are locked.