

WASHING INSTRUCTIONS



1. Fill the washing machine - at full load, there must be a hand-width air to the drum
2. Remember to select program. The keyboard is locked when the machine is turned on.

WASHING DETERGENT PROGRAM

- 1 = Colored
- 2 = White
- 3 = Wool

FABRIC SOFTENER

- ON/OFF

LOAD OF CLOTHES

- High
- Medium
- Low

EXPLANATION



SOAP

Colored



- Colored/delicates
- Retain the color
- Washing temperature 30-60 degrees
- Without optical brighteners and bleach

White



- White washing
- Washing temperature 30-90 degrees
- With optical brighteners and bleach

Wool



- Wool wash
- Protects delicate fabrics
- Based on clean soap



HOW MUCH SOAP?

High	Very dirty
Medium	Ordinary clothes washing
Low	Partly loaded or slightly dirty



FABRIC SOFTENER

Gives the clothes a pleasant scent and makes it antistatic